

BakTrak - VTD

BakTrak The Ultimate MP3 & WAV Backing Track Pedal

DESIGNED & DEVELOPED BY MUSICIANS FOR MUSICIANS

Additional Information for BakTrak-VTD users



The BakTrak-VTD Pedals (BTV1010-****) come in a steel housing with anti-slip rubber strips on the base and will play both MP3 & WAV files. A high definition OLED screen displays the selected Track Name, Track Number, Switch Positions, File Format & Card/File errors on initial power-up. (Operational Modes: Performance - List - BakTrak). We would recommend BakTrak-VTD for gigging with up to 48 tracks manually selected via the 'Track' & 'Mode' switches or BakTrak-VTD can also auto increment through your set list using the 'List' or 'Performance Mode' with the unique 'BakTrak' mode for practice.

BakTrak-VTD has three modes of operation, emulating the generic play function of a Mini Disk Player. This allows the user to choose between 'Performance' mode (P1,P2,P3,P4) 'List' mode (L1,L2,L3,L4) and 'BakTrak' mode (B1,B2,B3,B4), 'BakTrak' mode is manual track selection via the 'Mode' and 'Track' switches, however 'Performance' & 'List' mode will auto increment through your sequentially numbered set list 00001 to 00048.

File formats: Mp3 - Bit rates 90 - 320 (inc) variable Bit rates WAV - PCM uncompressed - 44100Hz - 16 Bit
You can add in the song names that will be displayed on the screen (ie) nnnnn - x...x .mp3 (Where "nnnnn" is the track number from 00001 to 00048 and "x...x" is the song name up to 20 Characters, plus .Mp3 or .WAV)

On power up BakTrak-VTD will check for a valid memory card and log the tracks in your sequential set list (LED solid green), If all is ok the screen will then display the selected track, show solid orange and wait for a foot-switch press & release to start playing the list from the selected track, the LED will indicate solid green for 'Performance' mode and 'List' mode.

Track Select Switch (12 Position)

Use the "Track" switch in combination with the "Mode" switch to pick the MP3 or WAV track to play for the start of your set list (up to 48 tracks). The "Track" switch is marked 1 to 12 and for the mode switch set to "P1", Track Switch position "1" it will select the track numbered 00001 on the memory card & position "2" will select track 00002 & so on.

Mode Switch (12 Position)

Performance - (P1, P2, P3, P4) Hit & release the Play/Stop footswitch to start the track. The LED will go from "Orange" to "Green" while the track is playing. Hit the footswitch while the track is playing and it will auto increment to the next track in your set list and the new track will start playing instantly and so on until the end of your list. Hold the footswitch down for 3 seconds to stop the track. If a track is stopped it will restart from the beginning of that track.

List - (L1, L2, L3, L4) Hit & release the Play/Stop footswitch to start the track. The LED will go from "Orange" to "Green" while the track is playing. Hit & release the footswitch while the track is playing and it will "Pause" with the LED "Flashing Orange" hit & release it again and it will start from where it was paused. When the track comes to a natural end it will auto increment to the next track in your set list & wait for a foot press & release to start your next track. Hold the footswitch down for 3 seconds to stop the track. If a track is stopped it will restart from the beginning of that track.

BakTrak - (B1, B2, B3, B4) Hit & release the Play/Stop footswitch to start the track. The LED will go from "Orange" to "Flashing Red" while the track is playing. Hit & release the footswitch while a track is playing, and the track will jump back 10 seconds, hit & release it again and it will jump back another 10 seconds, hit & release it again and go back a further 10 seconds (30 seconds maximum) or the start of the track, whichever is the shorter time and play from there. Hold the footswitch down for 3 seconds to stop the track.

If the next track in the list is not valid move the switches to positions to a valid track, if you have come to the end of your list, BakTrak-VTD will show end of list and flash Red three times, Green three times and orange three times until either the switches are changed or the pedal is held down for more than three seconds, "List" & "Performance" mode will then start at the current switch position.