

BakTrak - Remote Trigger Sync Kit Instructions

The Ultimate MP3 & WAV Backing Track Pedal

DESIGNED & DEVELOPED BY MUSICIANS FOR MUSICIANS

Additional Information for BakTrak Remote Trigger Sync Kit users

Two BakTrak Pedals can be triggered to start at the same time by using the BakTrak Sync Kit (BT1100) and a BakTrak Remote Trigger Foot Switch (BT1080-**), allowing multiple tracks to be synchronized to start and play simultaneously.

Up to two Stereo Tracks can be played simultaneously or with the addition of 2 x Stereo to Split Mono Adaptors (BT1031) four Mono Tracks can be played simultaneously.

Power Cable - Use the Dual Power Cable, (2 x 5.5mm, 2.1mm plugs and 1 x 5.5mm, 2.1mm socket) to connect the two BakTrak pedals to a single BakTrak Power Supply.

Remote Trigger Cable - Use the Dual Remote Trigger cable (2 x 3.5mm Mono plugs and 1 x 3.5mm Mono socket) to connect the two BakTrak's (Trig - Sockets) to the BakTrak Remote Trigger Foot Switch.

Setup - All interconnections should be made with the power off.

IMPORTANT NOTE

To ensure that the two BakTrak pedals are fully synchronised take note of the LED Indicators and make sure that when the Remote Foot Switch is pressed and both Mode Switches are set to 'List' Mode (L1, L2, L3, L4) the LED's flash together when the tracks are playing.

If the LED's are out of step, down power both pedals and power up both pedals at the same time, so that the LED's are both flashing at the same time.

Do not use the individual BakTrak pedal Play/Stop foot Switches or power up the BakTrak pedals separately as this will cause the pedals and hence the tracks to be out of sync.